 


# OWNER'S MANUAL

# PR-II SERIE

Counting Scale

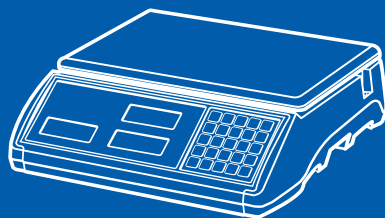

# CAS

**\*859.505**






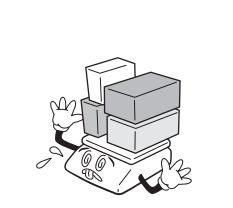

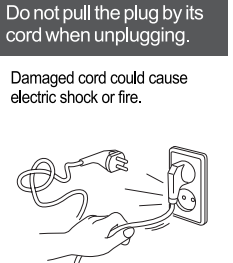
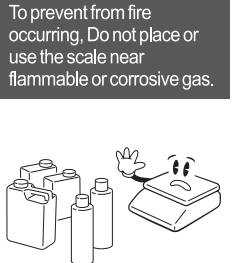
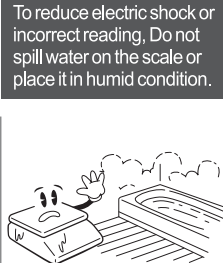
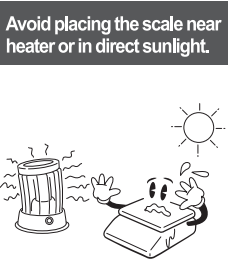
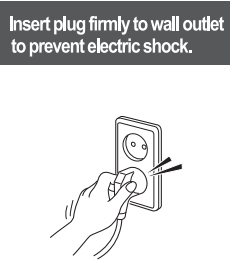
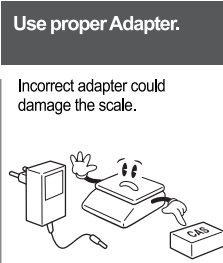
## CONTENTS

|  |           |
|--|-----------|
| <b>PRECAUTIONS .....</b>                           | <b>3</b>  |
| <b>PREFACE, OVERALL VIEW .....</b>                 | <b>5</b>  |
| <b>DISPLAY AND KEY BOARD .....</b>                 | <b>6</b>  |
| <b>REMOVE THE SCREW .....</b>                      | <b>9</b>  |
| <b>COLUMN INSTALLATION .....</b>                   | <b>9</b>  |
| <b>OPERATION</b>                                   |           |
| <b>Chapter 1. Basic Operation .....</b>            | <b>10</b> |
| <b>Chapter 2. PLU Saving &amp; Calling-up.....</b> | <b>13</b> |
| <b>Chapter 3. User' s Set-up Mode .....</b>        | <b>16</b> |
| <b>Chapter 4. Sales transaction .....</b>          | <b>18</b> |
| <b>TECHNICAL PARAMETER.....</b>                    | <b>20</b> |
| <b>ERROR MESSAGE.....</b>                          | <b>20</b> |

# PRECAUTIONS

## Warning

Precautions when installing the scale. To ensure that you get the most from your scale, please follow these instruction.

|   |   |   |
|---|---|---|
| <p>Do not disassemble the scale.</p> <p>When any damage or defect occurs, contact your CAS authorized dealer immediately for proper repair.</p>  | <p>Do not overload beyond the maximum weight limit.</p>    | <p>Scale must be grounded to minimize electricity static.</p>    |
| <p>Do not pull the plug by its cord when unplugging.</p> <p>Damaged cord could cause electric shock or fire.</p>                                 | <p>To prevent from fire occurring, Do not place or use the scale near flammable or corrosive gas.</p>  | <p>To reduce electric shock or incorrect reading, Do not spill water on the scale or place it in humid condition.</p>  |
| <p>Avoid placing the scale near heater or in direct sunlight.</p>    | <p>Insert plug firmly to wall outlet to prevent electric shock.</p>                                  | <p>Use proper Adapter.</p> <p>Incorrect adapter could damage the scale.</p>    |

## PRECAUTIONS

### Attention

Make sure to plug your scale into the proper power outlet. For maximum performance, plug into a power outlet 30 minutes before the usage for warm up.

For consistent and accurate reading, maintain periodical check by your CAS authorized dealer.



Avoid sudden shock to the scale.



Grab on the bottom of the scale when moving.



Keep the scale away from other electromagnetic generating devices.

This may interfere with accurate reading.



Place the scale on firm and temperature consistent environment.



By adjusting 4 corners of the scale, set the scale even using the built in scale leveling indicator.



Take the battery out when scale is not in use for long time. Leakage from the batteries is hazardous.



# PREFACE

Thank you for purchasing CAS PR-II series.

 
These series have been designed with CAS reliability, under rigid quality control and with outstanding performance. Your special departments can enjoy these high quality reliable CAS products.

We believe that your needs will be satisfied and you will have proper reliability.

This manual will help you with proper operation and care of the PR-II

Please keep it handy for future reference.

## OVERALL VIEW

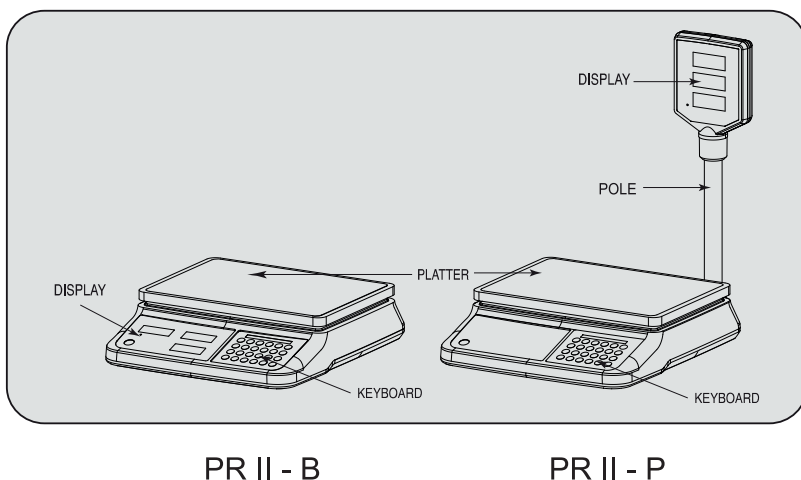


## DISPLAY & KEY BOARD


### ■ PR II - B Front display



 
### ■ PR II - B Rear display

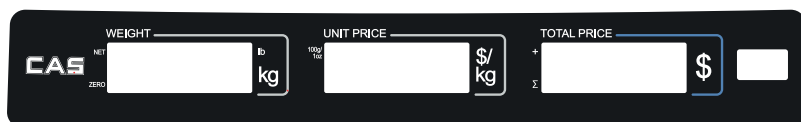

■ PR II - P Front cover

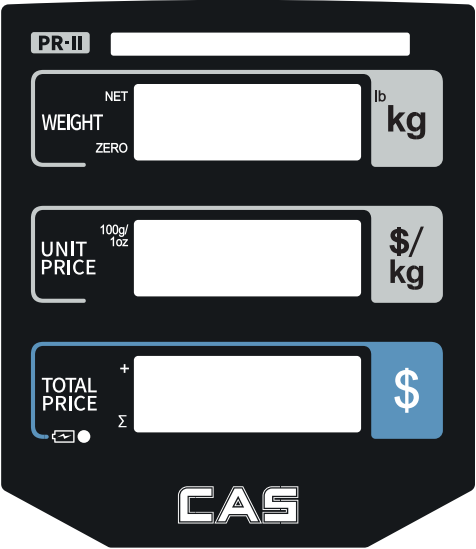 



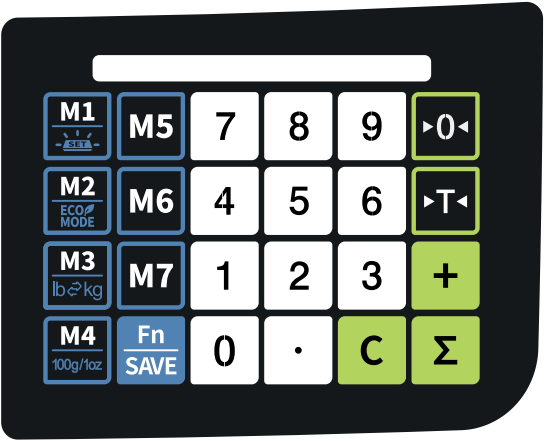 












■ key






## ■ Function keys
 
| KEYS  | FUNCTIONS  |
|---|--|
|  ~  | Used to enter all the numeric data   |
|  ~  | PLU key.   |
|    | Function key(Back-light, Power Save<br>Used to enter PLU setting   |
|    | Used to clear all the numeric price display<br>Used to clear sum total price<br>Used to clear all the daily total prices |
|    | Used to correct the zero point   |
|    | To set or clear tare value   |
|    | PLU save key.<br>To make several sales transaction by adding up.   |
|    | To check total sales amount or finalize sales transaction.   |
|    | Used to enter the decimal point when price is entered.   |
|    | Used to change back-light setting.(OFF, ON, AUTO)  |
|    | Power Save Mode  |
|   | Used to change the unit of weight.(kg or lb)   |
|    | Used to price per 100g (\$/100g) or 1oz (\$/1oz)   |

# REMOVE THE SCREW

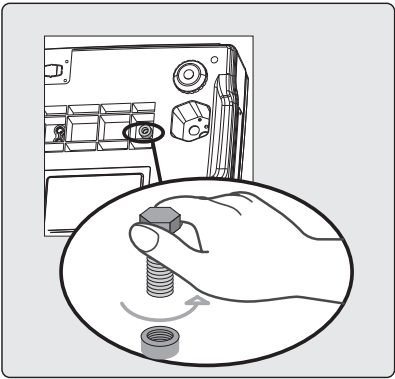

Remove the crew

**NOTICE:** Make sure to remove the screw before use at the first time.

# COLUMN INSTALLATION

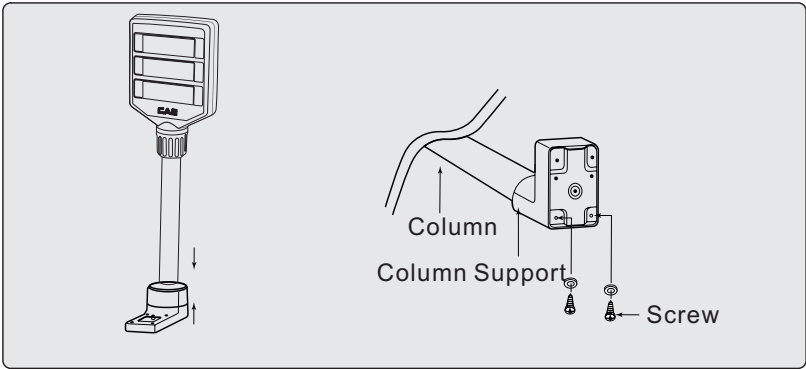 


Figure one

Figure two


Column Installation

# OPERATION

 - Turn on the ON/OFF switch. Then, the display will show all the segments and count up "9" to "0".

## Chapter 1. Basic Operation

### a. Zero function

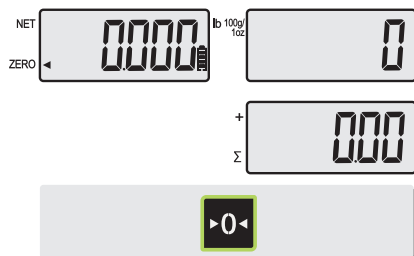


- ① Press **ZERO** key to set Zero.

### b. Tare function

 Tare means the weight of container. You may use tare function when you weigh an item with container and measure only the weight of item.


#### ■ One time tare

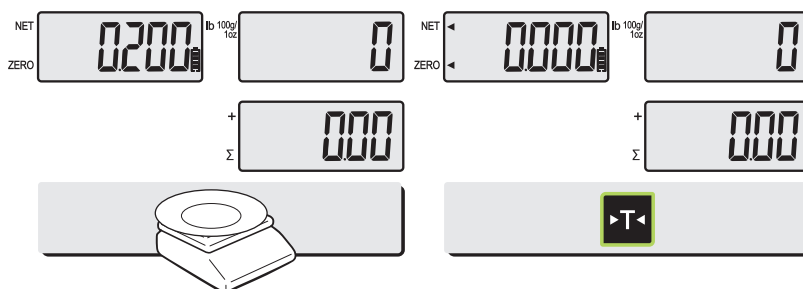

- ① Place a container on the platter.  
EX) 200g of tare.


- ② Press **TARE** key to set zero point.  
EX) 200g of tare.

## ■ Successive tare

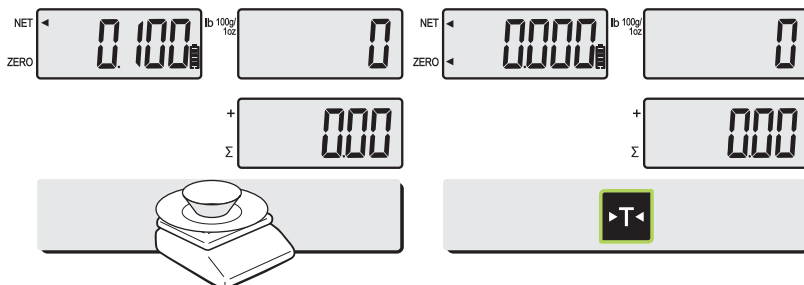 

③ Place another container on the platter. EX) 100g of tare.

 ④ Press **TARE** key to set zero point.

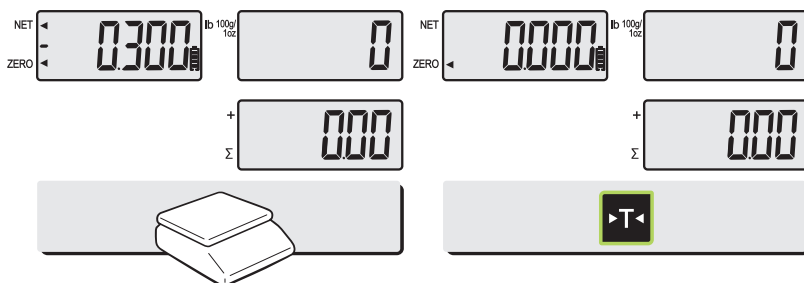

⑤ After weighing item remove all of the container from the platter.

⑥ Press **TARE** key again to set zero.


**NOTE :** To remove TARE function press "**TARE**" Key again after removing the container from the platter. Automatic tare clearing function may not be applied to all of PR series.

## Chapter 2. PLU Saving & Calling-up
 
### a. Saving unit price on PLU

This section explains how to save unit price in PLU.


|             | Number of PLU | Range | Remarks |
|-------------|---------------|-------|---------|
| PLU<br>NAME | 7             | 1~7   |         |

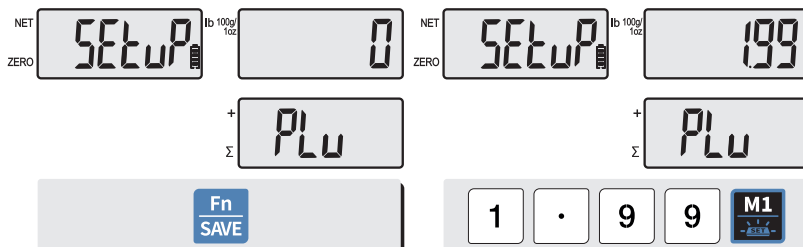

① Press the 'PLU' key for a few seconds then, Set-up menu will be shown.

② After input unit of price, press number of PLU that you want to set up.

### b. Calling up PLU

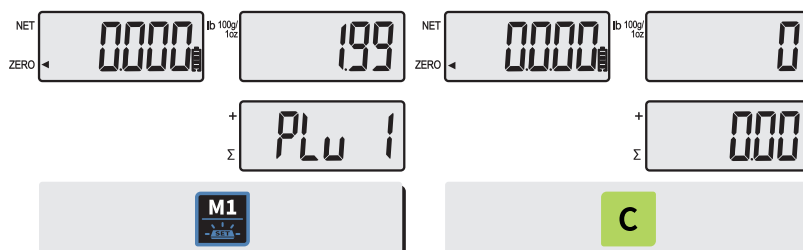 






① Press M1 ~ M7 key to call up PLU. e.g. Press M1 key.

② Press C key to clear and return to the normal weighing mode.

### Chapter 3. User's Set-up Mode

This section explains how to set up the following functions.

 
| KEY   | Display        | FUCTION  |  |
|---|----------------|--|--|
|  | bL-At          | Use back-light when you put on the weight        |  |
|   | bL-oFF         | Do not use a back-light.                         |  |
|   | bL-on          | Use back-light always                            |  |
|  | ps - 0         | Do not use power save mode.                      |  |
|   | ps - 1         | Use power save mode                              |  |
|  | kg             | Used to kg units                                 |  |
|   | lb             | Used to lb units                                 |  |
|  | up- kg or lb   | Used to price per kg or lb                       |  |
|   | up-100g or 1oz | Used to price per 100g (\$/100g) or 1oz (\$/1oz) |  |
|  | rS-Co          |  |  |
|   | rS-PC          |  |  |
|   | rS-St          |  |  |

## Chapter 4. Sales transaction

PR-II can provide inputting the unit price through the numeric key and calling up PLU.

### a. Input the unit price through the numeric key


This section explains how to input the unit price through the numeric key and complete the sales transaction.

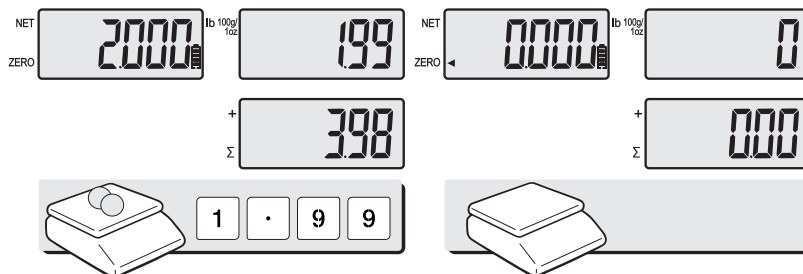

① Place an item on the platter and press appropriate numeric keys to input unit price. EX) 1.99 for unit price.


② Remove the item from the platter.

### b. Input the unit price through calling up PLU

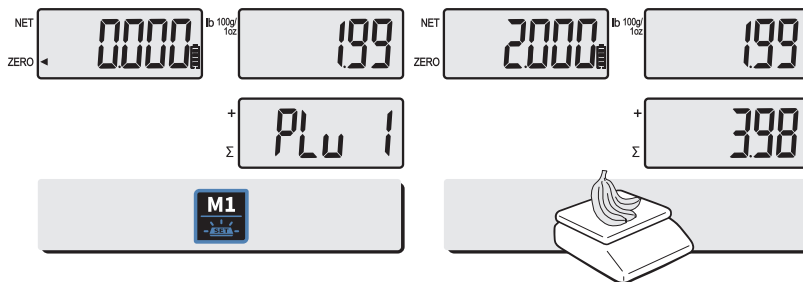 

① Press **M1~M7** key can call up the PLU. EX) **M1**

 
② Place an item on the platter.

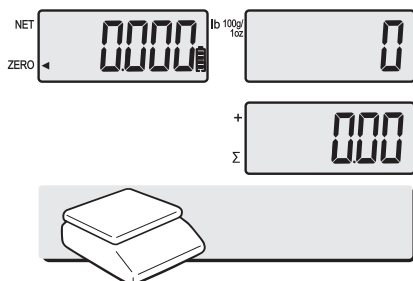


③ Remove an item on the platter.

### c. Adding up several sales transactions for weighed items

 
- Use + key to makes the adding-up transactions.
- You may either call up PLU or just input the unit price.

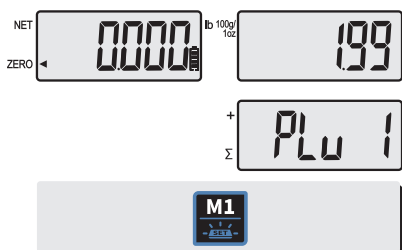

 
① Press **M1~M7** key can call up the PLU. EX) **M1**

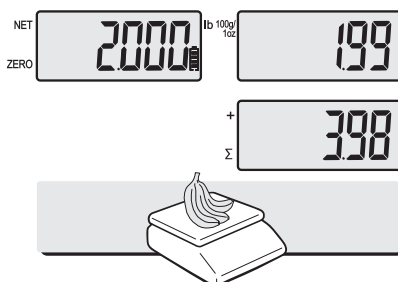

② Place an item on the platter.

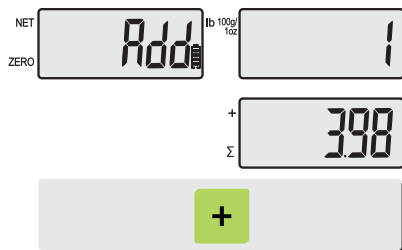 


③ Press **+** key.

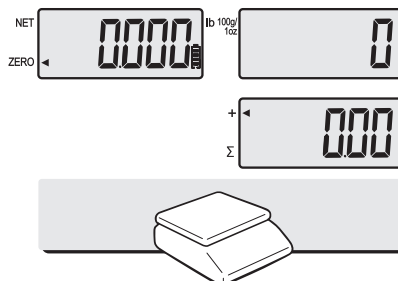 


④ Remove the item from the platter.



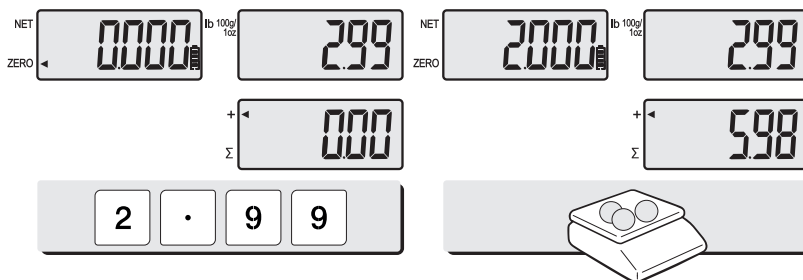 

⑤ Input a unit price.  
EX) 2.99 for Honey melon

 ⑥ Place an item on the platter.

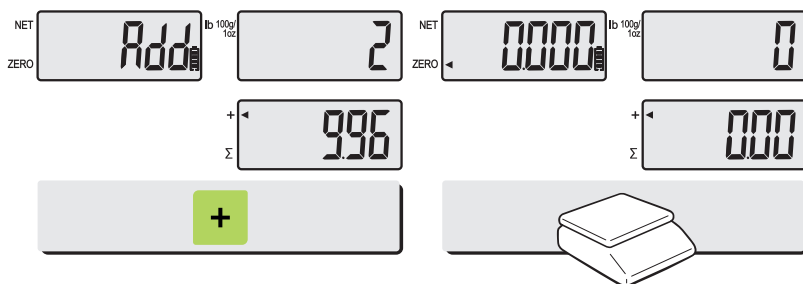


⑦ Press + key. "Total Price" display says total price added, and "Unit Price" display says the number of sales transactions added.

⑧ Remove the item from the platter.

- You may also place the item on the platter first and then input unit price in the scale later.

## Chapter 5. Payment
 
### a. Payment function on total sales amount

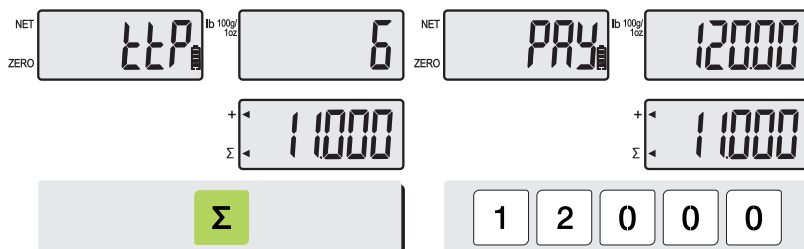


① Press  $\Sigma$  key to call up total price.

(If you want to go back to sales mode, press **zero** key.)

② Input payment of consumer by numeric key.

 
Ex) 120.00 payment

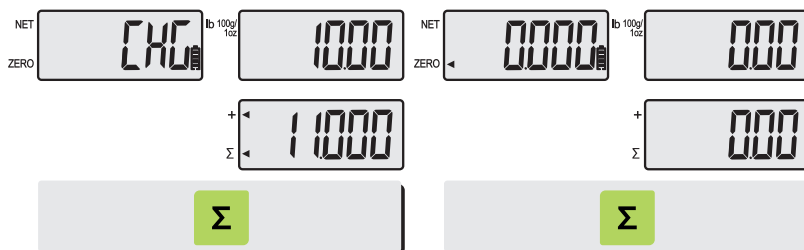

③ Press  $\Sigma$  key to call up the change amount.


④ After checking the change amount press  $\Sigma$  key to go back to normal weighing mode.

### b. Deleting total sales data

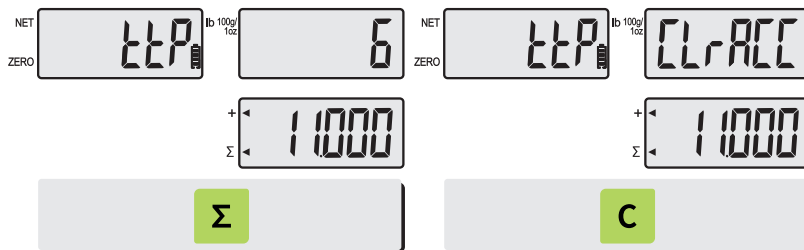 

① Press  $\Sigma$  key to call up total price.  
(If you want to go back to sales mode, press zero key.)

 ② Press C key to delete "total sales" data.  
Clear account message shows up shortly, and then it goes to normal weighing mode.

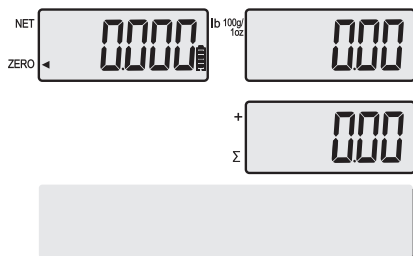

③ And then it goes to normal weighing mode.

# BATTERY MAINTENACE

## LOW BATTERY WARNING

When the battery is low the display shows the "Err b" sign.  
You can replace the battery new one.  
If you still use the scale without replacing the battery the scale may provide incorrect result on measurement.

## ERROR MESSAGE

| Error Message on Display | Description  | Solution                       |
|--------------------------|--|--------------------------------|
| "Z-Err"                  | The "Z-Err" occurs when a current zero point has shifted from the last span calibration.               | Please call your CAS dealer.   |
| "Err"                    | The "Err" message will be shown when HIGH and LOW limits are set as the same or above maximum capacity | Please reset the weight again. |
| "Err 3"                  | The "Err 3" is an overload error.  | Please remove the weight.      |
| "Err-b"                  | The "Err b" is battery low.  | Please change new batter.      |

## SPECIFICATIONS (PR-II)

| MODEL                                | PR-II   |                                  |                      |                                |                      |                               |
|--------------------------------------|---|----------------------------------|----------------------|--------------------------------|----------------------|-------------------------------|
|                                      | <u>Dual Interval</u>  | <u>Single</u>                    | <u>Dual Interval</u> | <u>Single</u>                  | <u>Dual Interval</u> | <u>Single</u>                 |
| Capacity                             | Max 3/6kg   | Max 6kg                          | Max 6/15kg           | Max 15kg                       | Max 15/30kg          | Max 30kg                      |
| e                                    | e=1/2g  | e=2g<br>e=1g<br>e=0.5g<br>e=0.2g | e=2/5g               | e=5g<br>e=2g<br>e=1g<br>e=0.5g | e=0.5/1g             | e=10g<br>e=5g<br>e=2g<br>e=1g |
| External Resolution                  | 1/3000  | 1/3000~1/30000                   | 1/3000               | 1/3000~1/30000                 | 1/3000               | 1/3000~1/30000                |
| MAX Tare                             | -1.4995 kg  | -2.999 kg                        | -5.998 kg            | -14.995 kg                     |                      |                               |
| Display                              | 6/6/6(Weight / Unit price/ Total price)   |                                  |                      |                                |                      |                               |
| Symbols                              | ZERO, TARE, kg/lb,100g/1oz, ADD, SUM, Low Battery, AC POWER   |                                  |                      |                                |                      |                               |
| Keys                                 | ZERO, TARE, M1~M7 KEY, FUCTION, ADD, SUM(삭제?)   |                                  |                      |                                |                      |                               |
| Functions                            | Direct PLU 7<br>Unit Conversion<br>Power Save Mode<br>Print out Function<br>Back-light ON/OFF Control Function  |                                  |                      |                                |                      |                               |
| Dimensions                           | P TYPE : 341 (W) x 435 (D) x 474 (H)[mm] / 134 (W) x 171 (D) x 186 (H)[inch]<br>B TYPE : 341 (W) x 383 (D) x 102 (H)[mm] / 134 (W) x 151 (D) x 40 (H)[inch] |                                  |                      |                                |                      |                               |
| Platter size                         | 330 (W) x 235 (D)[mm] / 129.92 (W) x 92.52 (D)[inch]  |                                  |                      |                                |                      |                               |
| Weight                               | 2.8 kg  |                                  |                      |                                |                      |                               |
| Power                                | 1.5 V x 3 units (D size Battery), Pb 4V/4Ah, 6 V Adapter  |                                  |                      |                                |                      |                               |
| Operation Time                       | Approx. 250hours (Manganese battery)/<br>500 hours (Alkaline at 20 °C /68 °F)   |                                  |                      |                                |                      |                               |
| Operating Temperature                | -10 °C ~ +40 °C / 14 °F ~ 104 °F  |                                  |                      |                                |                      |                               |
| Minimum Voltage Level of The Battery | About 3.6V  |                                  |                      |                                |                      |                               |
| Option                               | RS232, USB, Mn Battery, Pole Type   |                                  |                      |                                |                      |                               |

※ Notice: Specifications are subject to change for improvement without notice.